

Модели WP-25, WP-30, WP-40, WP-50 и WP-60

Поздравляем с приобретением нагревательной плиты для цыплят! Убедительная просьба, внимательно прочитайте руководство перед началом эксплуатации! Приятного пользования!

СОДЕРЖИМОЕ КОРОБКИ

1. Нагревательная плита
2. 4 ножки желтого цвета

МОНТАЖНЫЕ НОЖКИ:

У ножек есть верхняя и нижняя стороны. Различить их несложно: верхняя сторона круглая, а нижняя сторона оснащена черной резиновой опорой.


С нижней части нагревательной плиты, по углам расположены подвижные кронштейны с надписью «PUSH» (НАДАВИТЬ). Надавите на желтый кронштейн и переместите головку желтой ножки из-под нагревательной плиты через отверстие. Когда необходимая высота будет выставлена, снимите кронштейн. Убедитесь, что все ножки настроены на одинаковую высоту.

USE:

Вставьте вилку в блок питания (220-240 В переменного тока). Загорится красный светодиод.

Скорость полного нагревания плиты - 1 час.

Теперь можно разместить цыплят под нагревательной плитой!

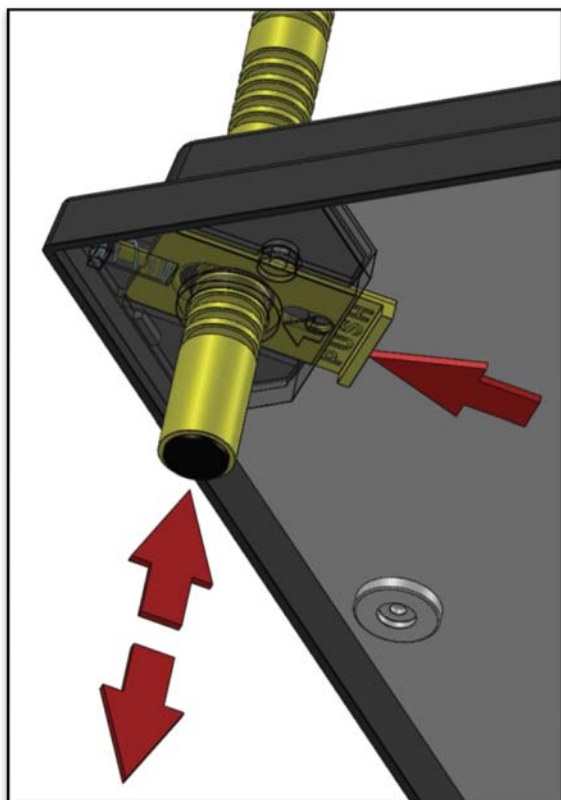

HEIGHT LEGS:

Important to know is that a heating plate is not a heat source like a heat bulb. A heat bulb becomes very hot and radiates the heat downwards. A heating plate is completely different, as only the surface of the bottom side of the heating plate is warm. It is important that the chicks can touch the heating plate, especially when they are new born.

For that reason the height adjustment is very crucial.

A good indication of the right height are the chicks. They show when they are satisfied. When they “peep” they are not satisfied. When they are silent and lay down relaxed they are satisfied.

For the height adjustment, a good indication is the back height of the chicks. This has to be adjusted at least once a week as the chicks grow. The minimum height is 3cm from the litter.

HOW YOUR CHICKS SHOW THAT THE HEIGHT OF THE HEATINGPLATE IS CORRECT?

GOOD HEIGHT	Chicks lay down underneath the heating plate and a few are standing. They give a satisfied impression and don't peep. Sometimes they leave from underneath the heating plate.
TOO HIGH HEATINGPLATE	Chicks are standing and won't leave from underneath the heating plate. They "peep".
TOO LOW HEATINGPLATE	Chicks won't go under the heating plate as it is too warm. It is difficult to get underneath, because the height is too low.

MISUNDERSTANDINGS:

Some users think they need to use a thermometer to check the temperature underneath the heating plate. This is incorrect and not necessary. You don't put a thermometer under a brooding hen either.

The behaviour of your chicks shows you if they are satisfied or not! Important is that you frequently check their behaviour!

CLEANING AFTER USE:

After each use cleaning is required with a wet cloth. If necessary, first clean the surface from any dirt with a scraper. Do not use water and don't keep the heating plate under water!

Technical information heating plate:

See label bottom side product!

Safety facilities:


This heating plate has 2 safety facilities to avoid short circuiting and overheating. One is a resistance fuse 0.5Amp and a temperature fuse of 120°C.

IMPORTANT:

Use this heating plate as intended. It should be used horizontally with topside up (see picture on the packaging). The 4 legs have to be used as indicated. The minimum height is 3cm above the litter. Any other use (including when the product is opened or any change is made on the cable) or use without the legs, leads to the warranty being invalid and exceeds the responsibility of the producer.



← OPTIONAL >> temperature controller for heating plates (code WPR)

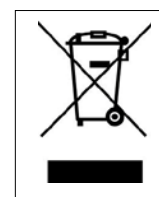

WEEE
Reg.-Nr.
DE
86292507

Producer: OLBA B.V. • Pasteurweg 3 • 7741 LB • COEVORDEN • NETHERLANDS

For warranty-matters always contact your supplier!